



Model KCS with Decision-Maker® MPAC 1200 Controller

Decision-Maker® MPAC 1200 Controller Standard Features

- Microprocessor-based controller
- Environmentally sealed user interface
- LCD display, 4 lines x 20 characters, backlit
- Dynamic function keypad with tactile feedback pushbuttons allows complete programming and viewing capability at the door
- LED indicators: Source available, transfer switch position, service required (fault), and not in auto
- Broadrange voltage sensing (208–600 VAC) on all phases
- Phase-to-phase sensing and monitoring with 0.5% accuracy on both sources
- Frequency sensing with 0.5% accuracy on both sources
- Anti-single phasing protection
- Phase rotation sensing for three-phase systems
- Real-time clock with automatic adjust for daylight saving time and leap year
- Run time clock and operation counter
- Time-stamped event log
- Fail-safe transfer for loaded test and exercise functions
- DIP switches: password disable and maintenance
- Isolated RS-485 ports for Modbus connections (9.6, 19.2, and 57.6 kbps)
- Modbus® RTU protocol (Modbus register map available)
- USB port. Connect a personal computer and use Kohler® SiteTech™ software to view events and adjust settings. *
- Available in automatic and non-automatic versions; see supervised transfer control switch on page 5

Programmable Features

- Programming and monitoring methods:
 - Monitoring and password-protected programming at the door using the keypad and display
 - Program using a PC with Kohler® SiteTech™ software (available to Kohler-authorized distributors and dealers)
- Over/undervoltage for all phases of the normal and emergency sources
- Over/underfrequency for the emergency source
- Adjustable time delays
- Load/no load/auto-load test and load/no-load exercise functions
- Programmable inputs and outputs
- Load bank control for exercise or test
- Time-based load control, nine individual time delays for selected loads
- In-phase monitor (3-phase only)
- Password protection, three security levels
- See pages 2 and 3 for additional programmable features

* SiteTech software is available to Kohler-authorized distributors and dealers.

Modbus is a registered trademark of Schneider Electric.

Applicable Models

Model	Description
KCS	Standard-Transition Any Breaker ATS ‡
KCP	Programmed-Transition Any Breaker ATS ‡
KCC	Closed-Transition Any Breaker ATS §
KSS	Standard-Transition Specific Breaker ATS ‡
KSP	Programmed-Transition Specific Breaker ATS ‡
‡ Available with automatic or non-automatic controller	
§ Available with automatic controller only	

Decision-Maker® MPAC 1200 Controller Features

User Interface LED Indicators

- Contactor position: source N and source E
- Source available: source N and source E
- Service required (fault indication)
- Not in automatic mode

LCD Display

- System status
- Line-to-line voltage
- Line-to-neutral voltage
- Active time delays
- Source frequency
- Preferred source selection
- System settings
- Common alarms
- Load current, each phase (current sensing kit required)
- Inputs and outputs
- Faults
- Time/date
- Address
- Event history
- Maintenance records
- Exerciser schedule
- Exerciser mode
- Time remaining on active exercise

Dynamic Function Tactile Keypad Operations

- Scroll up/down/forward/back
- Increase/decrease/save settings
- End time delay
- Start/end test or exercise
- Reset fault
- Lamp test

DIP Switches

- Maintenance mode
- Password disable

Event History

- View time and date-stamped events on the display or on a personal computer equipped with Kohler® SiteTech™ software. *
- Download complete event history files using Kohler SiteTech software and a PC connected to the USB port. *

Main Logic Board Inputs and Outputs

- Two (2) programmable inputs
- Two (2) programmable outputs

Communications

- Optional Ethernet communications with RJ45 connector for 10/100 Ethernet connection
- Isolated RS-485 ports for Modbus communications
- Modbus® RTU and Modbus® TCP/IP protocols (Modbus® register map available)
- USB Port. Use SiteTech software to upload or download files and adjust transfer switch settings *
 - Application software
 - Event history files
 - Language files
 - Parameter settings
 - Usage reports
 - Feature configuration

Programmable Features

- System voltage, 208–600 VAC †
- System frequency, 50/60 Hz †
- Single/three-phase operation †
- Standard/programmed/closed-transition operation †
- Preferred source selection allows the normal or emergency source to be used when both sources are available (alarm module required)
- Phase rotation: ABC/BAC/none selection with error detection
- Overvoltage and undervoltage pickup and dropout settings, both sources
- Overfrequency and underfrequency pickup and dropout settings, Emergency source
- Voltage unbalance, enable/disable
- In-phase monitor: enable/disable and phase angle
- Transfer commit/no commit
- Passwords, system and test
- Time, date, automatic daylight saving time enable/disable
- Time delays (see table)
- Exerciser: calendar mode, loaded/unloaded up to 21 events
- Test: loaded/unloaded/auto load (1–60 minutes)
- Remote test: loaded/unloaded
- Automatic override on generator failure (loaded test and exercise)
- Peak shave delay enable/disable
- Current monitoring (current sensing kit required)
- Load control pre/post-transfer delays, 9 individual time delays for selected loads
- Resettable historical data

* SiteTech software is available to Kohler-authorized distributors and dealers.

† System parameters are factory-set per order.

Modbus is a registered trademark of Schneider Electric.

Decision-Maker® MPAC 1200 Controller Features, Continued

Programmable Inputs

- Forced transfer to OFF (programmed-transition models only; requires load shed accessory)
- Inhibit transfer
- Low battery voltage (external battery supply module required)
- Peak shave/area protection input
- Remote common fault
- Remote test
- Remote end time delay
- Remotely monitored inputs, four (4) available

Programmable Outputs

- Alarm silenced
- Audible alarm
- Chicago alarm control
- Common alarm events
- Contactor position
- Exercise active
- Failure to acquire standby source
- Failure to transfer
- Generator engine start, source E
- I/O module faults
- In-phase monitor synch
- Load bank control
- Load control active (pre/post transfer delay, up to 9 outputs)
- Loss of phase fault, source N and E
- Low battery fault (external battery supply module required)
- Maintenance mode
- Non-emergency transfer
- Not in automatic mode
- Over/undervoltage faults, source N and E
- Peak shave/area protection active
- Phase rotation error, source N and E
- Preferred source supplying load
- Software-controlled relay outputs (four maximum)
- Source available, preferred and standby
- Standby source supplying load
- Test active
- Transfer switch auxiliary contact fault
- Transfer switch auxiliary contact open
- Voltage unbalance, source N and E

Voltage and Frequency Sensing		
Parameter	Default	Adjustment Range
Undervoltage dropout	90% of pickup	75%-98%
Undervoltage pickup	90% of nominal	85%-100%
Overvoltage dropout *	115% of nominal*	106%-135%
Overvoltage pickup	95% of dropout	95%-100%
Unbalance enable	Disable	Enable/Disable
Unbalance dropout	20%	5%-20%
Unbalance pickup	10%	3%-18%
Voltage dropout time	0.5 sec.	0.1-9.9 sec.
Underfrequency dropout †	99% of pickup	95%-99%
Underfrequency pickup †	90% of nominal	80%-95%
Overfrequency dropout †	101% of pickup	101%-115%
Overfrequency pickup †	110% of nominal	105%-120%
Frequency dropout time †	3 sec.	0.1-15 sec.
* 690 volts, maximum. Default = 110% for 600 volt applications.		
† Emergency source only		

Adjustable Time Delays		
Time Delay	Default	Adjustment Range
Engine start	3 sec.	0-6 sec. †
Engine cooldown	5 min.	0-60 min.
Fail to acquire standby source	1 min.	
Transfer, preferred to standby	3 sec.	
Transfer, standby to preferred	15 min.	
Transfer, off to standby	1 sec.	1 sec. - 60 min.
Transfer, off to preferred	1 sec.	
Fail to synchronize	60 sec.	10 sec – 15 min.
Auto load test termination after transfer	1 sec.	1 sec.-60 min.
Load Control Time Delays:		
Pretransfer to preferred	0 sec.	0-60 min.
Post-transfer to preferred	0 sec.	
Pretransfer to standby	0 sec.	
Post-transfer to standby	0 sec.	
Note: Time delays are adjustable in 1 second increments, except as noted.		
† Engine start time delay can be extended to 60 minutes with an External Battery Supply Module Kit.		

Accessory Modules

The mounting kit holds up to five optional modules.

Module Current Draw Specifications, mA	
Alarm Module	75
Standard I/O Module	75
High Power I/O Module	100
Maximum Total Current *	300
* If an External Battery Module is installed, there is no current restriction.	

☐ Standard Input/Output Module

Inputs	
Available Inputs	2
Input Definition	Contact closure
Current	5 mA Max
Connection Type	Terminal Strip
Wire Size	#14-24 AWG
Max Distance	700 feet
Outputs	
Outputs Available	6
Contact Type	Form C (SPDT)
Contact Voltage Rating	2 A @ 30 VDC 500 mA @ 125 VAC
Connection Type	Terminal Strip
Wire Size	#14-24 AWG

☐ High-Power Input/Output Module

Inputs	
Available Inputs	2
Input Definition	Contact closure
Current	5 mA Max
Connection Type	Terminal Strip
Wire Size	#14-24 AWG
Max Distance	700 feet
Outputs	
Outputs Available	3
Contact Type	Form C (SPDT)
Contact Voltage Rating	12 A @ 24 VDC 12 A @ 250 VAC 10 A @ 277 VAC 2 A @ 480 VAC
Connection Type	Terminal Strip
Wire Size	#14-24 AWG
Environmental Specifications	
Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	35% to 85% noncondensing

☐ Alarm Module

- 90 dB Audible alarm
- Any alarm function can be programmed to trigger the audible alarm
- Chicago alarm function
- Preferred source selection
- Supervised transfer control (supervised transfer control switch required)
- Connection for external alarm

External Alarm Connection Specifications	
Wire Size	#12-22 AWG Cu
Contact Voltage Rating	500 mA @ 120 VAC
	250 mA @ 240 VAC

☐ External Battery Supply Module

- Energizes the ATS controls using an external battery when no source power is available
- Allows extended engine start time delays
- Allows the use of any combination of accessory modules (no current draw restriction, maximum of five modules total)
- Connects to one or two batteries, 12 VDC or 24 VDC system
- Current draw, 140 mA @ 12 VDC, 86 mA @ 24 VDC
- Provides low external battery voltage indication to the transfer switch controller
- Reverse-polarity protected

Other Controller Accessories

Accessories are available either factory-installed or as loose kits, unless otherwise noted.

☐ Controller Disconnect Switch

- Disconnects power to the controller without disconnecting the load
- Mounts inside the enclosure

☐ Current Sensing Kit

- Monitor current on all phases with 1% accuracy

☐ Digital Meter

- Measure and display voltage, current, frequency, and power for both sources
- Programmable visual alarms for high voltage, low voltage, and high current
- Three digital outputs
- Serial port for optional network connections
- Password-protected programming menus
- Joystick operation
- Factory-installed

☐ Ethernet Communications

- RJ-45 connector
- Supports Internet Protocol version 4 (IPv4)
- Supports Modbus TCP/IP protocol

☐ Line-to-Neutral Voltage Monitoring

- Monitors all line-to-neutral voltages

☐ Load Shed Kit

- Forced transfer from Emergency to OFF for programmed-transition models
- Customer-supplied signal (contact closure) is required for the forced transfer to OFF function
- Factory-installed only

☐ Padlockable User Interface Cover

- Provides additional protection against unauthorized access
- Cover standard on NEMA 3R enclosures

☐ RSA III Remote Serial Annunciator

- Monitors the generator set
- Monitors ATS common alarm, Normal source, and Emergency source status and connection
- Allows remote testing of the ATS
- For more information about RSA III features and functions, see specification sheet G6-139

☐ Supervised Transfer Control Switch

- Standard on models with non-automatic controls
- Optional for models with automatic controls
- Auto, manual, and transfer positions
- Automatic and non-automatic modes
- Alarm module required

Supervised Transfer Control Switch Operation for Automatic and Non-Automatic Transfer Switches		
Switch Position	Automatic Switches	Non-Automatic Switches
AUTO	<ul style="list-style-type: none"> • Automatically transfers to the standby source, when available, if the preferred source is lost. • Transfers back to the preferred source when it becomes available. 	
MANUAL	<ul style="list-style-type: none"> • Automatically transfers to an available source if the connected source is lost. • Test, peak shave, and loaded exercise commands will transfer to the standby source. • Does not automatically transfer back to preferred when both sources are available. 	<ul style="list-style-type: none"> • Does not automatically transfer to an available source when the connected source is lost. • Test, peak shave, and loaded exercise commands are ignored. • Does not automatically transfer back to preferred when both sources are available. • Transfers only when the switch is manually moved to the TRANSFER position as described below.
TRANSFER (momentary switch position)	<ul style="list-style-type: none"> • Does not initiate an engine start sequence. Generator set engine must be signalled to start by an event such as a loss of utility, loaded test, loaded exercise, etc. • Allows transfer to the other source, if available. An event such as a loss of utility, loaded exercise, or loaded test must first initiate the transfer sequence. • Time delays will operate. Wait for time delays to expire, or press the End Time Delay button. • Operates pre- and post-transfer load control time delays if both sources are available. • MANUAL TRANSFER is displayed when the ATS is ready to transfer. 	

KOHLER CO., Kohler, Wisconsin 53044 USA
Phone 920-457-4441, Fax 920-459-1646
For the nearest sales and service outlet in the
US and Canada, phone 1-800-544-2444
KOHLERPower.com

Kohler Power Systems
Asia Pacific Headquarters
7 Jurong Pier Road
Singapore 619159
Phone (65) 6264-6422, Fax (65) 6264-6455

Environmental Specifications	
Operating Temperature	-20°C to 70°C (-4°F to 158°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	5% to 95% noncondensing

Main Board I/O Specifications	
Output contact type	Isolated form C (SPDT)
Output contact rating	1 amp @ 30 VDC, 500 mA @120 VAC
I/O terminals wire size	#12-24 AWG

Availability is subject to change without notice. Kohler Co. reserves the right to change the design or specifications without notice and without any obligation or liability whatsoever. Contact your local Kohler® Power Systems distributor for availability.

DISTRIBUTED BY: